

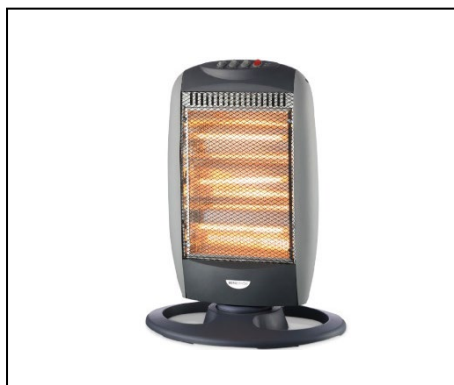
Halogen Heater

Item No H615 / 631660

Instructions for Use

v0006 14/08/25

BERGSTRÖM



Dimensions

Heater: W27 x D9 x H 48cm

Base 36 W x 26 D cm

- 3HEAT SETTING 400W/800W/1200W
 - COOL-TOUCH HOUSING
- Power Details: 220-240 V ~ 50-60 Hz, 1200W

GB : INSTRUCTION MANAUL

Power Details: Voltage details: 220-240V~
Frequency details: 50-60Hz
Wattage details: 1200W

Use: This item needs two hands for safe use.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Halogen Heater

DO NOT COVER THIS HEATER

THIS HEATER IS FITTED WITH ANTI-TIP OVER SWITCH TO CUT POWER OFF IF HEATER TIPS OVER.



Caution
Hot surface

CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE. ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES.

ASSEMBLING

- 1) To operate, stand the appliance on a horizontal, flat and stable surface.
- 2) Unscrew the wing nut screws placed in the interior part of the appliance.
- 3) Feed the cable through the hole in the middle of the support and assemble the support itself by putting it in the interior of the body.
- 4) Put the wing nut screws through the support and tighten them.

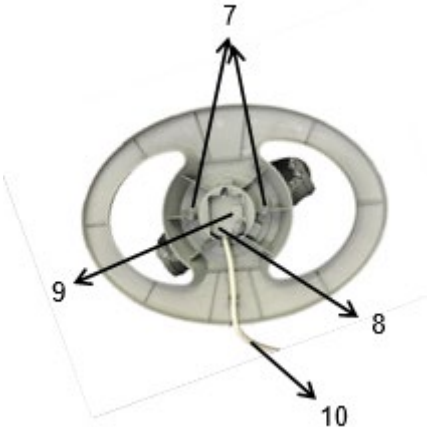
WORKING

- 1) Plug in the appliance and switch on. The tube in the middle will turn on. The other tubes can be turned on with their switches.
- 2) Switch on the key for oscillating (TURN) to let the stove oscillate to the left and to the right.
- 3) To switch off the appliance, put the switch to "OFF" position and unplug

AFTER SWITCHING ON OR OFF THE APPLIANCE, IT IS POSSIBLE TO HEAR A CLICKING NOISE DUE TO THE HEATING OR THE COOLING OF THE APPLIANCE. THIS IS NORMAL AND IT DOES NOT INDICATE A FAULT.

CLEANING AND MAINTENANCE

- Before cleaning the appliance, switch off, unplug and wait for it to cool down completely.
- Protect the parabola from dust to keep safe its reflecting characteristic.
- To clean the body, use a soft damp cloth; do not use abrasive products.
- The protection grill and the smocking net are very delicate; to clean them only use your vacuum cleaner, paying attention not to damage them.
- When the heater is not in use it needs to be covered and stored in a dry place. It is recommended to use the original packaging to preserve it from dust and humidity.
- The cable must be substituted with a special tool: please contact a competent qualified electrician.

	
Frontal part: 1. Switch “On/Off” central tube 2. Upper tube switch 3. Lower tube switch 4. Oscillate function 5. Protection grill 6. Support	Interior part: 7. Wing nut screws 8. Stabilising system 9. Safety tip-over switch 10. Cable and plug

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you need to replace the fuse, only use those that are ASTA or BSI approved to BS1362 and with a rated current of 7-amps. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product’s plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way.

GENERAL ADVICE

- **WHEN THE APPLIANCE IS IN USE IT BECOMES HOT: ONLY TOUCH THE PLASTIC HANDLE AND SWITCHES. AVOID TOUCHING THE RADIANT PART.**
- **DO NOT COVER THE APPLIANCE WHEN IT IS HOT, TO AVOID RISK OF FIRE.**
- **AFTER SWITCHING ON OR OFF THE APPLIANCE, IT IS POSSIBLE TO HEAR A LIGHT NOISE (CLICK) DUE TO THE HEATING OR THE COOLING OF THE APPLIANCE. THIS IS NORMAL AND IT DOES NOT INDICATE A FAULT.**

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE AND KEEP FOR FUTURE REFERENCE
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- AFTER UNPACKING AND BEFORE USE CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- USE ON A LEVEL AND STABLE SURFACE.
- NEVER TOUCH THE PLUG WITH WET HANDS
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALLPAPER, ETC.
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.
- DO NOT PLACE THIS ITEM IMMEDIATELY BELOW A SOCKET-OUTLET.
- DO NOT USE IN THE IMMEDIATE SURROUNDING OF A BATH, SHOWER OR SWIMMING POOL
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT USE WITH AN EXTENSION CORD.
- DO NOT CONNECT ANY OTHER ELECTRICAL APPLIANCE INTO THE SAME WALL SOCKET AS THIS HEATER.
- NEVER REMOVE THE PLUG BY PULLING ON THE POWER CORD.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT LEAVE THIS HEATER SWITCHED ON OR UNATTENDED.
- SWITCH OFF AFTER USE OR IF LEAVING THE ROOM TO AVOID ANY RISK OF OVERHEATING OR FIRE.
- DO NOT USE THE APPLIANCE WITH A TIMER OR A PROGRAMMER OR WITH A SYSTEM THAT CAN SWITCH ON THE APPLIANCE AUTOMATICALLY, TO AVOID RISK OF FIRE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY US MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.

- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM ALL ROUND CLEARANCE OF AT LEAST 10CM.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE MOVING THIS HEATER FOR PUTTING ON OR TAKING OFF PARTS OR PLACING IN STORAGE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

ANY REPAIR MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT. THIS DOES NOT AFFECT YOUR STATUTORY CONSUMER RIGHTS.

PLUG WIRING

This appliance is supplied with a BS1363 3 Pin plug.

DO NOT use If the socket outlets in your home are not suitable for this product's plug pins. Attempts to insert the mains adaptor/charger into the wrong socket are likely to cause electric hazard or damage.

PLUG FUSE (UK / NI ONLY)

This appliance is fitted with a moulded BS 1363 13-amp plug. This is fitted with a 7-amp fuse.

If you must replace the fuse, only those that are ASTA or BSI approved to BS1362 should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

DISPOSAL

- We use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.

Code & Symbol	
Type of Plastic	Low Density Polyethylene

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal

DE: BEDIENUNGSANLEITUNG

Abmessungen

Heizgerät: B 27 x T 9 x H 48 cm

Sockel: B 36 x T 26 cm

- 3 HEIZSTUFEN 400 W/800 W/1200 W
- KÜHL BLEIBENDES GEHÄUSE

Stromversorgung: 220–240 V ~ 50–60 Hz, 1200 W

Power Details: Voltage details: 220-240V~
Frequency details: 50-60Hz
Wattage details: 1200W

Verwendung: Dieses Gerät muss mit beiden Händen gehalten werden, um sicher verwendet werden zu können.

Bitte lesen Sie diese Bedienungsanleitung vor der Inbetriebnahme sorgfältig durch und machen Sie sich mit der Bedienung Ihres neuen Halogenheizgeräts vertraut.

DECKEN SIE DIESES HEIZGERÄT NICHT AB.

DIESES HEIZGERÄT IST MIT EINEM KIPPSCHUTZSCHALTER AUSGESTATTET, DER DIE STROMVERSORGUNG UNTERBRICHT, WENN DAS HEIZGERÄT UMKIPPT.



Caution
Hot surface

ACHTUNG! DIE AUSSENFLÄCHEN DIESES ELEKTROGERÄTS WERDEN BEIM NORMALEN GEBRAUCH HEISS. LASSEN SIE DAS GERÄT ABKÜHLEN, BEVOR SIE DIE AUSSENFLÄCHEN BERÜHREN.

MONTAGE

- 1) Stellen Sie das Gerät zum Betrieb auf eine horizontale, ebene und stabile Fläche.
- 2) Lösen Sie die Flügelmuttern im Inneren des Geräts.
- 3) Führen Sie das Kabel durch die Öffnung in der Mitte der Halterung und montieren Sie die Halterung, indem Sie sie im Inneren des Gehäuses anbringen.
- 4) Stecken Sie die Flügelmuttern durch die Halterung und ziehen Sie sie fest.

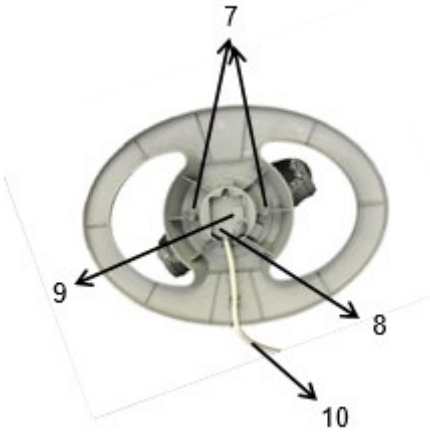
BETRIEB

- 1) Schließen Sie das Gerät an und schalten Sie es ein. Die Röhre in der Mitte schaltet sich ein. Die anderen Röhren können mit ihren Schaltern eingeschaltet werden.
- 2) Schalten Sie den Schalter für die Oszillation (TURN) ein, damit der Ofen nach links und rechts oszilliert.
- 3) Um das Gerät auszuschalten, stellen Sie den Schalter auf „OFF“ und ziehen Sie den Stecker.

NACH DEM EIN- ODER AUSSCHALTEN DES GERÄTS KANN ES AUFGRUND DER ERWÄRMUNG ODER ABKÜHLUNG DES GERÄTS ZU EINEM KLIICKGERÄUSCH KOMMEN. DIES IST NORMAL UND KEIN ANZEICHEN FÜR EINE FEHLERHAFTE FUNKTION.

REINIGUNG UND WARTUNG

- Schalten Sie das Gerät vor der Reinigung aus, ziehen Sie den Stecker und warten Sie, bis es vollständig abgekühlt ist.
- Schützen Sie die Parabolantenne vor Staub, um ihre Reflexionseigenschaften zu erhalten.
- Verwenden Sie zur Reinigung des Gehäuses ein weiches, feuchtes Tuch; verwenden Sie keine scheuernden Reinigungsmittel.
- Das Schutzgitter und das Rauchabzugsnetz sind sehr empfindlich; reinigen Sie sie nur mit Ihrem Staubsauger und achten Sie darauf, sie nicht zu beschädigen.
- Wenn der Heizstrahler nicht in Gebrauch ist, muss er abgedeckt und an einem trockenen Ort aufbewahrt werden. Es wird empfohlen, die Originalverpackung zu verwenden, um ihn vor Staub und Feuchtigkeit zu schützen.
- Das Kabel muss mit einem Spezialwerkzeug ausgetauscht werden: Wenden Sie sich bitte an einen kompetenten, qualifizierten Elektriker.

	
Bedienteil: 1. Schalter „Ein/Aus“ für das mittlere Rohr 2. Schalter für das obere Rohr 3. Schalter für das untere Rohr 4. Oszillationsfunktion 5. Schutzgitter 6. Halterung	Innen: 7. Flügelmutterschrauben 8. Stabilisierungssystem 9. Sicherheits-Kippschutzschalter 10. Kabel und Stecker

ALLGEMEINE HINWEISE

- **WÄHREND DES BETRIEBS WIRD DAS GERÄT HEISS: BERÜHREN SIE NUR DEN KUNSTSTOFFGRIFF UND DIE SCHALTER. VERMEIDEN SIE ES, DEN HEIZELEMENTBEREICH ZU BERÜHREN.**
- **DECKEN SIE DAS GERÄT NICHT AB, WENN ES HEISS IST, UM BRANDGEFAHR ZU VERMEIDEN.**
- **NACH DEM EIN- ODER AUSSCHALTEN DES GERÄTS IST MÖGLICHERWEISE EIN LEICHTER GERÄUSCH (KLICKEN) ZU HÖREN, DAS AUF DIE ERWÄRMUNG ODER ABKÜHLUNG DES GERÄTS ZURÜCKZUFÜHREN IST. DIES IST NORMAL UND KEIN ANZEICHEN FÜR EINE FEHLERHAFTE FUNKTION.**

WARNHINWEISE UND SICHERHEITSHINWEISE:

BEI DER VERWENDUNG VON ELEKTRISCHEN GERÄTEN SIND IMMER DIE GRUNDLEGENDEN SICHERHEITSVORSICHTSMASSNAHMEN ZU BEACHTEN:

- **LESEN SIE VOR DER VERWENDUNG ALLE ANWEISUNGEN UND BEWAHREN SIE SIE ZUR SPÄTEREN EINSICHT AUF**
- **NUR FÜR DEN GEBRAUCH IN HAUSHALTEN IN INNENRÄUMEN.**
- **NICHT IM FREIEN ODER FÜR GEWERBLICHE ZWECKE VERWENDEN.**
- **VERWENDEN SIE DIESES GERÄT NUR FÜR DEN VORGESEHENEN VERWENDUNGSZWECK.**
- **PRÜFEN SIE VOR DEM ANSCHLUSS DES GERÄTS, OB DIE AUF DER UNTERSEITE DES GERÄTS ANGEGEBENE SPANNUNG MIT DER NETZSPANNUNG IN IHREM HAUSHALT ÜBEREINSTIMMT.**
- **PRÜFEN SIE DAS GERÄT NACH DEM AUSPACKEN UND VOR DER VERWENDUNG GRÜNDLICH AUF MÄNGEL UND VERWENDEN SIE ES NICHT, WENN SIE MÄNGEL FESTSTELLEN. ACHTEN SIE DARAUF, DAS GERÄT NICHT ZU VERLIEREN, DA STARKE STÖSSE ZU INNENLIEGENDEN SCHÄDEN FÜHREN KÖNNEN.**
- **ÜBERPRÜFEN SIE DAS GERÄT UND DAS NETZKABEL VOR JEDEM GEBRAUCH SORGFÄLTIG AUF BESCHÄDIGUNGEN.**
- **DECKEN SIE DAS GERÄT WÄHREND DES GEBRAUCHS NICHT AB, DA DIES ZU ÜBERHITZUNG FÜHREN KANN.**
- **VERWENDEN SIE DAS GERÄT AUF EINER EBENEN UND STABILEN OBERFLÄCHE.**
- **BERÜHREN SIE DEN STECKER NIEMALS MIT NASSEN HÄNDEN.**
- **STELLEN SIE DAS GERÄT NICHT UNTER ODER IN DER NÄHE VON ENTZÜNDLICHEN MATERIALIEN WIE VORHÄNGEN, GARDINEN, REGALEN, LOSEN TAPETEN USW. AUF.**
- **HALTEN SIE DAS GERÄT MINDESTENS 1 M VON BRENNBAREN MATERIALIEN WIE MÖBELN, KISSEN, BETTWÄSCHE, PAPIER, KLEIDUNG, VORHÄNGEN USW. FERN.**
- **STELLEN SIE DIESES GERÄT NICHT UNMITTELBAR UNTER EINE STECKDOSE.**
- **NICHT IN UNMITTELBARER NÄHE VON BAD, DUSCHE ODER SWIMMINGPOOL VERWENDEN**
- **UM DIE GEFAHR VON BRAND ODER STROMSCHLAG ZU VERRINGERN, NICHT MIT EINER VERLÄNGERUNGSKABEL VERWENDEN.**
- **SCHLIESSEN SIE KEINE ANDEREN ELEKTRISCHEN GERÄTE AN DENSELBEIN STECKDOSENANSCHLUSS WIE DIESEN HEIZGERÄT AN.**
- **ZIEHEN SIE NIEMALS AM NETZKABEL, UM DEN STECKER AUS DER STECKDOSE ZU ZIEHEN.**
- **LASSEN SIE DAS NETZKABEL NICHT ÜBER DIE KANTE EINES TISCHES ODER EINER THEKE HÄNGEN ODER HEISSE OBERFLÄCHEN BERÜHREN.**
- **LASSEN SIE DIESES HEIZGERÄT NICHT EINGESCHALTET ODER UNBEAUF SICHTIGT.**
- **SCHALTEN SIE ES NACH DEM GEBRAUCH ODER BEIM VERLASSEN DES RAUMS AUS, UM EINE ÜBERHITZUNG ODER EINEN BRAND ZU VERMEIDEN.**
- **VERWENDEN SIE DAS GERÄT NICHT MIT EINER ZEITSCHALTUHR ODER EINEM PROGRAMMIERGERÄT ODER MIT EINEM SYSTEM, DAS DAS GERÄT AUTOMATISCH EINSCHALTEN KANN, UM BRANDGEFAHR ZU VERMEIDEN.**
- **DIESES GERÄT KANN VON KINDERN AB 8 JAHREN UND PERSONEN MIT EINGESCHRÄNKTER KÖRPERLICHER, SENSORISCHEN ODER GEISTIGEN EINSCHRÄNKUNGEN ODER MANGELNDEN ERFAHRUNG UND KENNTNISSEN VERWENDET WERDEN, WENN SIE BEI DER SICHEREN VERWENDUNG DES GERÄTS BEAUF SICHTIGT ODER ANGELEITET WURDEN UND DIE DAMIT VERBUNDENEN GEFAHREN VERSTEHEN. KINDER DÜRFEN NICHT MIT DEM GERÄT SPIELEN. DIE REINIGUNG UND WARTUNG DURCH DEN BENUTZER DARF NICHT OHNE AUFSICHT DURCH KINDER VORGENOMMEN WERDEN.**
- **KINDER UNTER 3 JAHREN SOLLTEN VON DEM GERÄT FERNGEHALTEN WERDEN, ES SEI DENN, SIE WERDEN STÄNDIG BEAUF SICHTIGT.**
- **EINIGE TEILE DIESES PRODUKTS KÖNNEN SEHR HEISS WERDEN UND VERBRENNUNGEN VERURSACHEN. BESONDERE VORSICHT IST GEBOTEN, WENN KINDER UND GEFÄHRDETE PERSONEN ANWESEND SIND.**
- **DIE VERWENDUNG VON ZUBEHÖR ODER ANBAUTEILEN, DIE NICHT VON UNS EMPFOHLEN WERDEN, KANN ZU VERLETZUNGEN FÜHREN UND ZUM ERLÖSCHEN DER GARANTIE FÜHREN.**

ENTSORGUNG

- Wir verwenden nach Möglichkeit recycelbare oder recycelte Verpackungen.
- Bitte entsorgen Sie alle Verpackungen, Papier und Kartons gemäß den Recyclingvorschriften Ihrer örtlichen Behörden.
- Am Ende der Lebensdauer des Produkts erkundigen Sie sich bitte bei Ihrer örtlichen, von der Gemeinde zugelassenen Recyclingstelle für Haushaltsabfälle nach der Entsorgung.
- Kunststoffe, Polybeutel – diese bestehen aus folgenden, recycelbaren Kunststoffen.
- Am Ende der Lebensdauer des Produkts erkundigen Sie sich bitte bei Ihrer örtlichen kommunalen Recyclingstelle für die Entsorgung.

Code & Symbol	
Type of Plastic	Low Density Polyethylene

FR : MANUEL D'UTILISATION

CZ: NÁVOD K POUŽITÍ

SK: NÁVOD NA OBSLUHU

Distributed by / Verteilt durch / Distribué par/ Distribútor / Distribuuje.

The Enterprise Department Ltd, Trading as Coopers of Stortford.

UK address: 11 Bridge Street, Bishops Stortford

Herts, UK, CM23 2JU



0330 331 0300



enquiries@coopersofstortford.co.uk



<https://www.coopersofstortford.co.uk>

The Enterprise Department Ltd, Trading as – Coopers of Stortford

D.S.B. LD, 160 Bd. De Fourmies, 59100 Roubaix, France



0330 331 0300



enquiries@coopersofstortford.co.uk



<https://www.coopersofstortford.co.uk>

DE/FR/CZ/SK :

3Pagen

Hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

53477 Alsdorf



+49 (0) 2404/980-204



kontakt@3pagen.de



www.3pagen.de



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

UK
CA

CE

